



4 WHEEL CART 1.5/3.5 GPM COMBINATION

| DRAWING INDEX | | |
|---------------|---------------------|----------|
| DRAWING # | DRAWING DESCRIPTION | REVISION |
| 4WHE3-01 | COVER PAGE | 1 |
| 4WHE3-02 | INSTALLATION | 1 |
| 4WHE3-03 | DIMENSIONS | 1 |

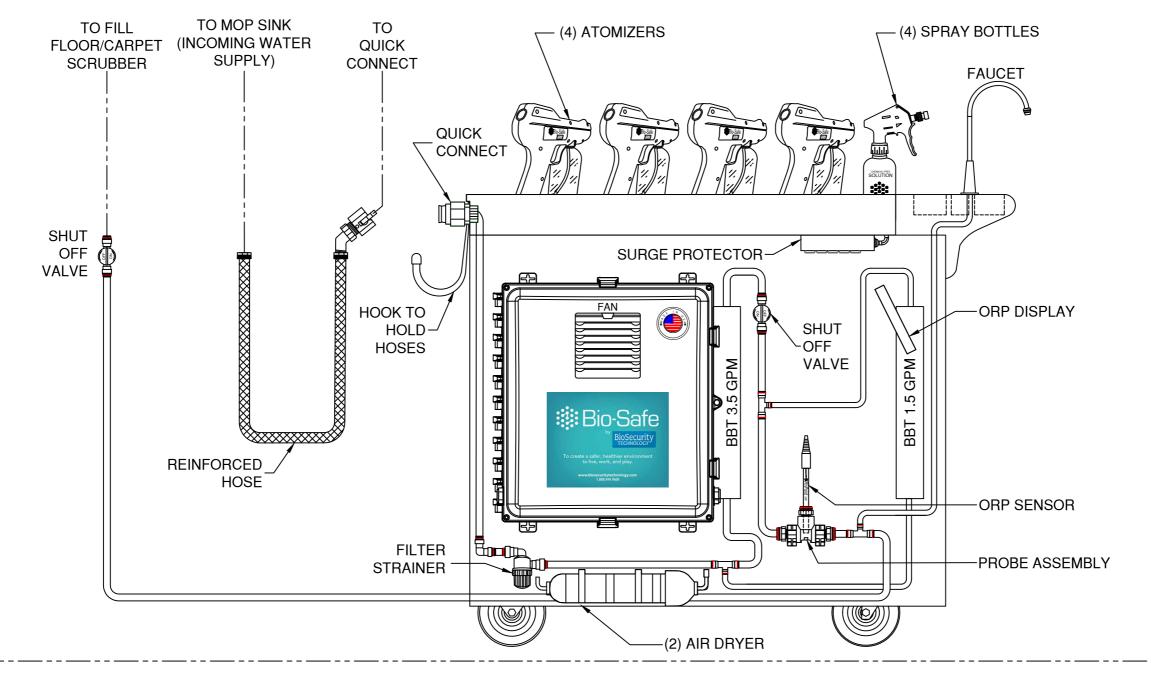

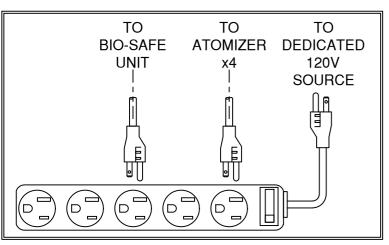


DETAIL A SURGE PROTECTOR


BIO-SAFE INSTALLATION

- 1. PLUG UTILITY CART INTO MOP SINK.
- 2. PLUG UTILITY CART SURGE PROTECTOR INTO 120V POWER SUPPLY.
- 3. MUST BE DEDICATED 120V POWER OUTLET.
- 4. TURN ON ORP DISPLAY.
- 5. FILL ATOMIZER AND SPRAY BOTTLE FROM FAUCET.
- 6. FILL CARPET/FLOOR MACHINE FROM REINFORCED HOSE.

NOTE:

BBT = BLACKBOX TECHNOLOGY

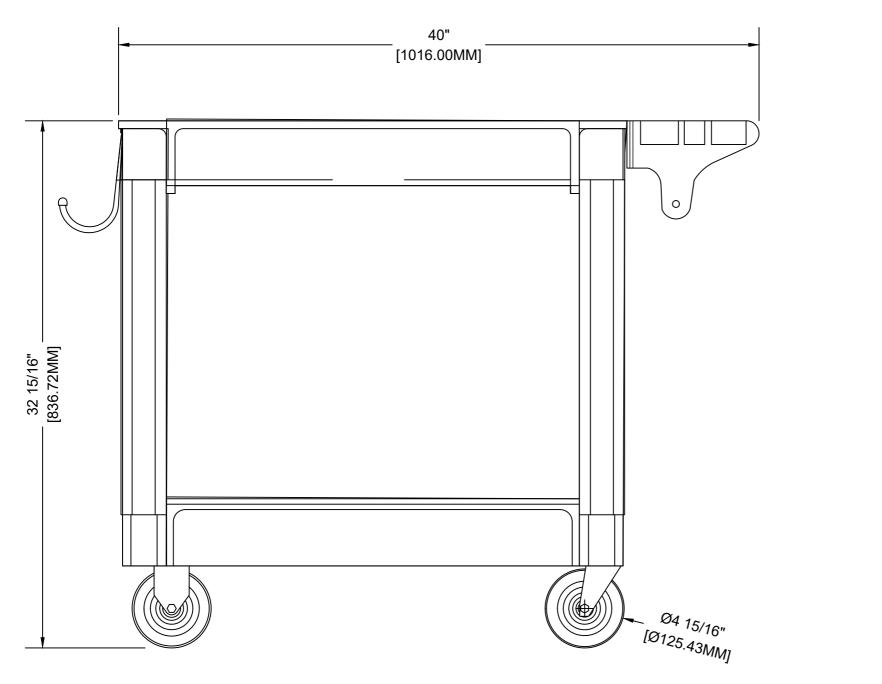

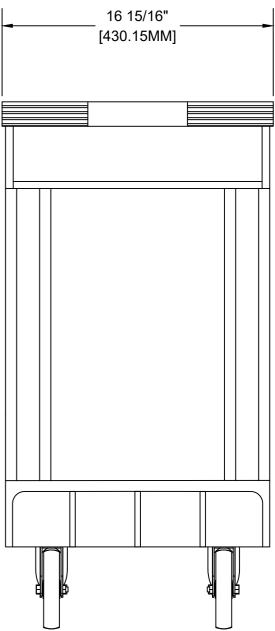

FRONT VIEW RIGHT VIEW